











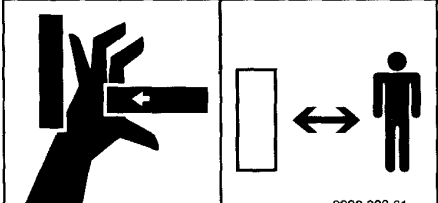
# Explanation of the Pictogram Symbols

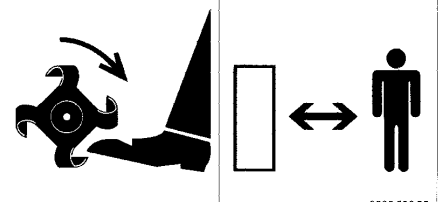
3.00

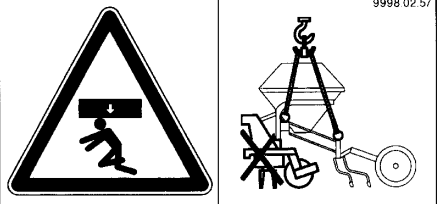
Warning symbols warn of possible danger areas. They are pointing out safe operation of the unit.

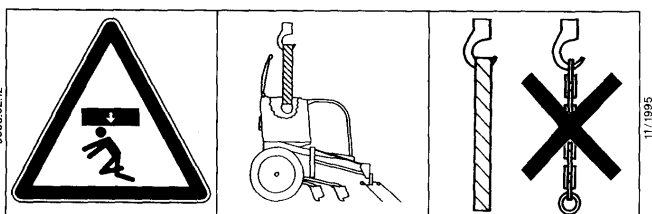
Keep the warning symbols clearly visible and clean and replace when damaged or re-sprayed by paint. They can be ordered under the order numbers stated.

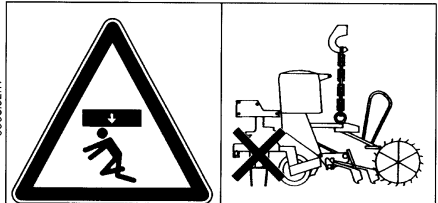
1 9998.02.59	  9998.002.59	Read operators instruction book before operation and ensure you understand the safety advices and the informations contains in it.
2 9998.02.73	  9998.02.73	Retighten all screws and bolts after the initial hours of work, and check regularly for tightness thereafter. For torque settings refer to manual or parts list. Use torque limiting spanner.
3 9998.02.56	  9998.02.56	Never allow people to stand or sit on the machine during work or in transport. Enter filling platform only when the machine is not in motion.
4 9998.02.53	  9998.02.53	Folding wings. Keep away! Keep clear and do not enter danger area. When extending take care of sufficient space.
5 9998.02.52	  9998.02.52	Plough may turn or swing in. Keep away. Do not enter danger area.


<b>6</b>  9998.02.61		<p>Danger of squeezing. Keep away!</p>
----------------------------	---	--


 
<b>7</b>  9998.02.55		<p>Rotating tools. Keep away! Do not grasp behind safety devices or covers. Never carry out work unless PTO-drive is disengaged and the engine is stopped.</p>
----------------------------	---	--

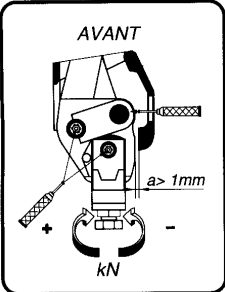
<b>8</b>  9998.02.57		<p><b>Danger of Life</b> by load from top! Lift Turbodrill only with empty hopper and never together with rotary harrow. Use safe lifting gear and fit straps only on hooks provided.</p>
----------------------------	--	---


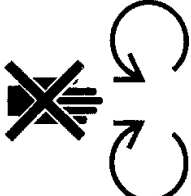
<b>9</b>  9998.02.12		<p><b>Danger of Life</b> by load from top! For lifting seed drills use only straps. No chains. Fit straps on divider plate inside the hopper.</p>
----------------------------	---	---


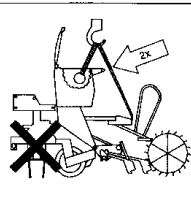
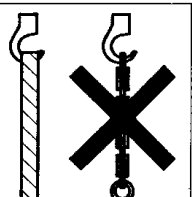
<b>10</b>  9998.02.11		<p><b>Danger of Life</b> by load from top! Lift with empty hopper only and never with rotary harrow or any other implement attached. Use safe lifting gear and fit straps only on hooks provided.</p>
-----------------------------	---	---

<b>11</b>  9998.02.63		<p>Use suitable and safe lifting gear and fasten here. Keep a safe distance from the machine being lifted.</p>
-----------------------------	---	--

12	9998.02.60	 	<p>Danger of leg injuries when elements may suddenly swing out. Keep away!</p>
----	------------	---	--

13	9998.02.58		<p>Grease all marked grease nipples regularly. The reset force can be increased by adjusting the bolt (kN) to the left (!). Reduce by turning to the right. There must be always a <b>minimum</b> clearance <b>a</b> of <b>1 mm</b>. Caution! Spring is pre-loaded. Do not dismantle or remove spring system without the use of special tools and without being familiar with the dismantling instructions provided by the manufacturer. <b>Danger of Life!</b></p>
----	------------	---	---

14	9998.02.64	 	<p>Never open or remove any safety guards when the unit is running. Keep away!</p>
----	------------	---	--

15	9998.02.10	  	<p><b>Danger of Life</b> by load from top! Lift with empty hopper only and never with rotary harrow or any other implement attached. Fit straps on divider plate inside the hopper and only on hooks provided. Use <b>no</b> chains.</p>
----	------------	---	--