

Key to warning labels (pictograms)

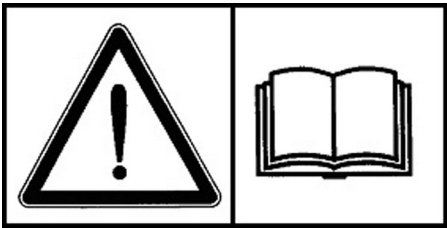

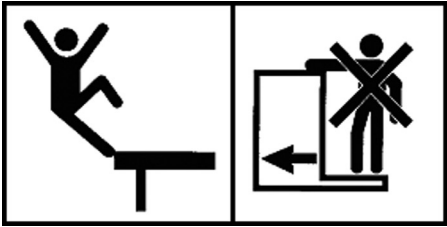


Warning labels are used to indicate possible danger areas; they provide information on how to operate the implement safely.

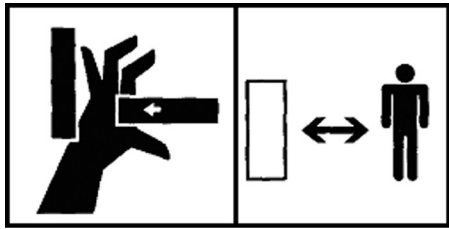
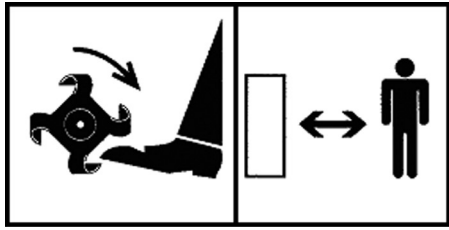
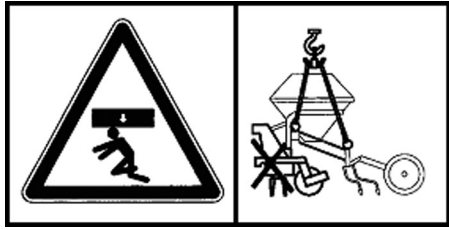
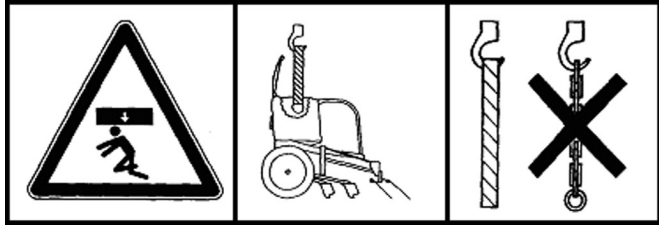


The pictograms are an integral part of the implement.



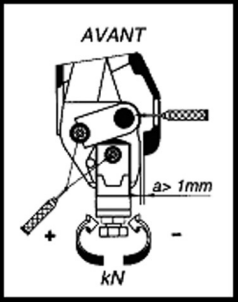




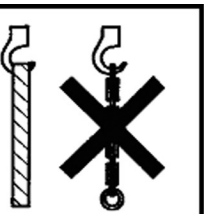

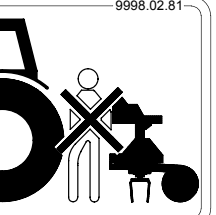

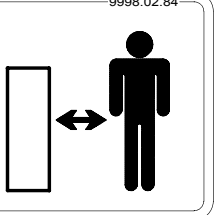
Warning labels should be visible (dirt-free) at all times, and replaced if damaged – they can be ordered from Rabe under the relevant pictogram number (Pict. No.).

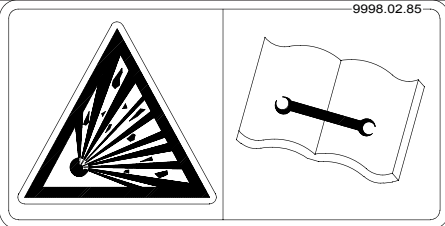
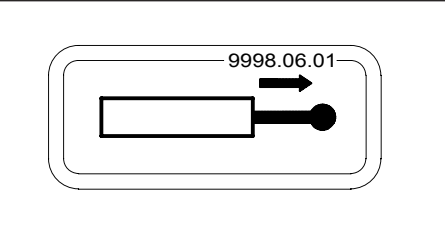
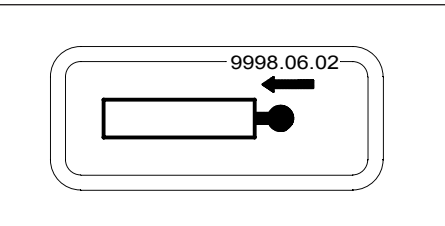
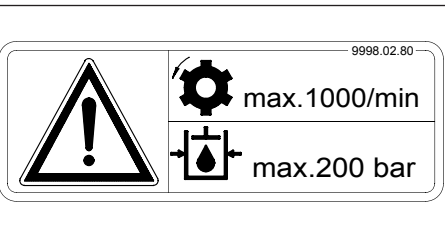
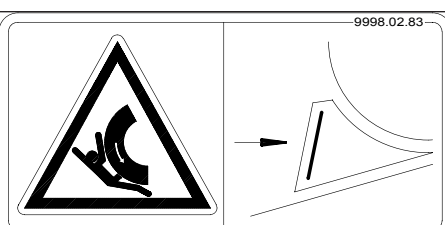
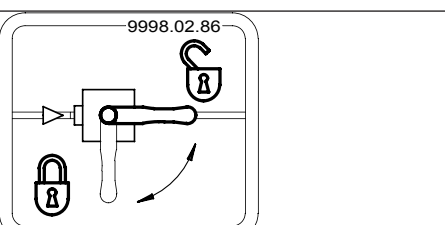
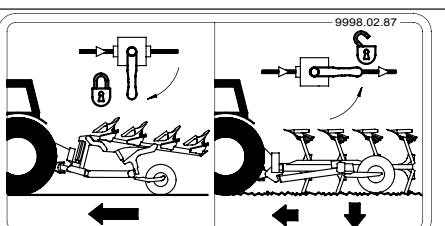
Pict. No.

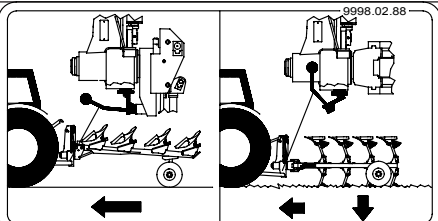
Position-No.

9998.02.59	1		Read operators instruction book before operation and ensure you understand the safety advices and the informations contains in it.
9998.02.73	2		Retighten all screws and bolts after the initial hours of work, and check regularly for tightness thereafter. For torque settings refer to manual or parts list. Use torque limiting spanner.
9998.02.56	3		Never allow people to stand or sit on the machine during work or in transport. Enter filling platform only when the machine is not in motion.
9998.02.53	4		Folding wings. Keep away! Keep clear and do not enter danger area. When extending take care of sufficient space.
9998.02.52	5		Plough may turn or swing in. Keep away. Do not enter danger area.

<p>6</p> <p>9998.02.61</p>		<p>Danger of squeezing. Keep away!</p>
<p>7</p> <p>9998.02.55</p>		<p>Rotating tools. Keep away!</p> <p>Do not grasp behind safety devices or covers.</p> <p>Never carry out work unless PTO-drive is disengaged and the engine is stopped.</p>
<p>8</p> <p>9998.02.57</p>		<p>Danger of Life by load from top!</p> <p>Lift Turbodrill only with empty hopper and never together with rotary harrow.</p> <p>Use safe lifting gear and fit straps only on hooks provided.</p>
<p>9</p> <p>9998.02.12</p>		<p>Danger of Life by load from top! For lifting seed drills use only straps. No chains.</p> <p>Fit straps on divider plate inside the hopper.</p>
<p>10</p> <p>9998.02.11</p>		<p>Danger of Life by load from top!</p> <p>Lift with empty hopper only and never with rotary harrow or any other implement attached.</p> <p>Use safe lifting gear and fit straps only on hooks provided.</p>
<p>11</p> <p>9998.02.63</p>		<p>Use suitable and safe lifting gear and fasten here.</p> <p>Keep a safe distance from the machine being lifted.</p>

12	9998.02.60	 	<p>Danger of leg injuries when elements may suddenly swing out. Keep away!</p>
13	9998.02.58		<p>Grease all marked grease nipples regularly. The reset force can be increased by adjusting the bolt (kN) to the left (!). Reduce by turning to the right. There must be always a minimum clearance a of 1 mm. Caution! Spring is pre-loaded. Do not dismantle or remove spring system without the use of special tools and without being familiar with the dismantling instructions provided by the manufacturer. Danger of Life!</p>
14	9998.02.64	 	<p>Never open or remove any safety guards when the unit is running. Keep away!</p>
15	9998.02.10	  	<p>Danger of Life by load from top! Lift with empty hopper only and never with rotary harrow or any other implement attached. Fit straps on divider plate inside the hopper and only on hooks provided. Use no chains.</p>
16	9998.02.81	 	<p>Risk of crushing in and around the tractor and the implement! When coupling the implement combination to the tractor, ensure that no one is standing within the operating areas of the tractor or implement! Do not step between the tractor and implement to operate the external three-point hydraulic controls.</p>
17	9998.02.84	 	<p>Caution! Hurling foreign objects! Keep danger areas clear of people!</p>

18 9998.02.85		<p>Hydraulic accumulator is pressurized. Repair and replace only as prescribed in the Technical Manual provided.</p>
19 9998.06.01		<p>Oil flow path: Forward: "Lift"</p>
20 9998.06.02		<p>Oil flow path: Return "Lower" or "Tank"</p>
21 9998.02.80		<p>The maximum operating pressure for the hydraulic system must not exceed 200 bar! The maximum rotational frequency of the PTO shaft must not exceed 1000/min!</p>
22 9998.02.83		<p>Before uncoupling or parking an implement, secure with wheel chocks to prevent rolling.</p>
23 9998.02.86		<p>Stop-cock to throughput and closed.</p>
24 9998.02.87		<p>Before transporting on roads, set to lock position with the shut-off valve open.</p>

<p>25</p> <p>9998.02.88</p>		<p>Safety catch for road transportation on combi-wheel.</p> <p>Disengage safety catch before working in the field.</p>
------------------------------------	---	--